

Sugar Pop

CHANTILLY PANTY VIBE

For warranty information, latest products, and news visit us at:
nsnovelties.com


CARE

- * Turn off device when not in use.
- * Do not operate the device while charging.
- * Please follow the charge times indicated in the device specifications.
- * Wash after each use with liquid anti-bacterial soap and water.
- * Pat dry with a cotton towel and allow to air dry completely.

Product Dimensions: Bullet: 3.31 x 1.65 x 1.3 (in),
Remote: 2.64 x 1.34 x 0.87 (in)
IPX Rating: Bullet: IPX6, Remote: IPX6
Battery: Bullet: Lithium Ion,
Remote: AAA
Charge Time: Do not exceed 60 minutes
Run Time: 50 minutes
Modes: 10




PLAY

- * Press & hold the  button on bullet for 2 seconds to enter standby mode.
- * Quick press button to cycle through vibration modes.

PLAYING WITH REMOTE

- * To use the remote the vibe must be in standby mode.
- * Quick press the "- / +" button on the remote to cycle through modes.
- * Quick press power button on remote to power off.

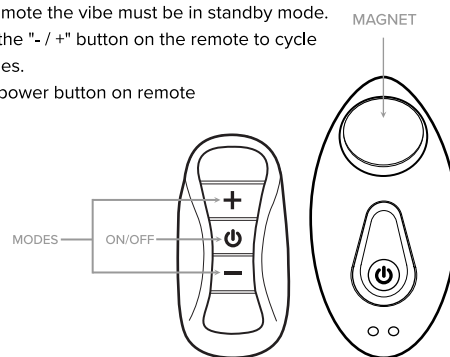

CHARGE

- * The light will blink while the device is charging.
- * The light will become solid once the device is fully charged.

