

<http://www.evolvednovelties.com/>



EVOLVED
Love is Back

Product Specifications:

Category: Vibrator
User: Women
Material: ABS+Silicone
Finish: Pantone 3245
Size: H:4.17 W: 2.68 D:3.99
Battery: Lithium polymer
battery 3.7V 450mAh
Voltage: 3.7V
Number of Vibrations:
8-frequency vibration
frequency, eight frequencies
for motor vibration
User time: The highest frequency
works for 1.5 hours
Sound Level: 56dbA

CHARGING INSTRUCTIONS

This vibrator arrives to you with a 50%-70% charge, so it is recommended to fully charge it before use for a better experience.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about 1 hour, and subsequent charges take about 2 hours to complete.

The indicator light will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 2.5 hours of play time on the lowest vibration level, and about 1.5 hours of play time on the highest level.

This toy comes with a Li-ion rechargeable battery and operates at 3.7V. It vibrates at a sound level of 56 dbA.

INSTRUCTIONS FOR USE
One button push on/off

Press KEY 1 for 2 seconds to turn on the shaft motor and cycle through 8 vibration speeds. At maximum speed, this button can perform no further function. Use the bottom button to cycle back down through the vibration speeds, and turn the shaft off.

KEY 3 cycles down through 8 shaft vibration speeds, and at the minimum speed, this button can perform no further function. Use the top button to cycle up through the vibration speeds. Press the bottom button for 2 seconds to turn shaft motor off.

Press KEY 5 for 2 seconds to turn on the butterfly motor and cycle through 8 vibration speeds. At maximum speed, this button can perform no further function. Use the left button to cycle back down through the vibration speeds.

KEY 4 cycles down through 8 butterfly vibration speeds, and at the minimum speed, this button can perform no further function. Use the right button to cycle up through the vibration speeds. Press the left button for 2 seconds to turn butterfly motor off.

KEY 2 operates the wireless remote. Press for 2 seconds to turn on the remote, which will begin in stand-by mode. The Key 2 indicator light will remain solid. Press it for 2 seconds again to turn the wireless remote off. If the Key 2 light is off, the remote will not work.

