

Product Specifications:

Category: Vibrator User: Women Material: ABS+Silicone Finish: PU Coating/Rose Gold Plating Size: 3.68x6.4x19.66CM Battery: 310mA Voltage: 3.7V Number of Vibrations: 10 Frequency User Time: 60-65 minutes Sound Level: Mid



Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about 100 minutes, and subsequent charges also take about 100 minutes to

The indicator light(s) will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 65 minutes of play time on the lowest vibration level, and about an hour of play time on the highest level.

This toy comes with a rechargeable battery and operates at DC3.7V (310 mA)

INSTRUCTIONS FOR USE - This toy has a 3-button control panel, a Power Button (center button), Increase Button (plus sign top button) and Decrease Button (minus sign bottom button).

Press the Power Button for at least 2 seconds to turn the

Press the Tower outlant of a fleast 2 seconds to form the toy on.

Press the Increase Button to cycle UP through 10 vibration frequencies. Press the Decrease Button to cycle DOWN through 10 vibration frequencies.

Press the Power Button for at least 2 seconds to turn the toy off.

