

Product Specifications:

Category: Vibrator User: Women or men Material: silicone and RTV silicone Finish: Matte Finish: Matte
Toy Size: H: 117mm W: 60mm D: 60mm
Remote Size: H: 83mm W: 32mm D: 30mm
Battery: LiCoMnNiO2
Voltage: 3.7-4.2 V
Number of Vibrations: 7
User time: 70-90 MINS Sound Level: 45 DB, 10CM distance from the test machine.

CHARGING INSTRUCTIONS
This vibrator arrives with a partial charge. It is recommended to charge for about 30

This vibrator arrives with a partial charge. It is recommended to charge for about 30 minutes before initial use.

Connect the USB plug into the USB port of your computer or other output and insert the pin end of the DC charger directly inside the toy's charger input socket at the base. Initial charge will take about 30 minutes, and subsequent charges will take about 1 hour to complete.

The plug's indicator light will flash red while device is charging, and turn solid green when toy is fully charged. The remote indicator light will flash green while charging, and turn solid red when remote is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time. Charge lasts for about 100 minutes of play time on the lowest level of vibration, and about 80 minutes on the highest level.

Toy vibration stops completely when charge is begins to deplete to a level lower than 3.1 volts.

This toy operates at a sound level of 45db and 3.7 – 4.2 V.

This toy operates at a sound level of 45db and 3.7 - 4.2 V.

INSTRUCTIONS FOR USE
This toy has a convenient one-button control at its base and on its remote control.
To turn toy on, press the button for at least 2 seconds. The light will turn on and toy will begin vibrating at its first lowest frequency.
Once the toy is on, press the button a single time for each new speed or function for a total of 7.

