

<http://www.evolvednovelties.com/>

EVOLVED
Love is Back



Product Specifications:

Category: Plug
Material: Silicone + ABS
Size: W: 1.71", H: 5.24", D: 1.71"
Battery: Lithium battery
Voltage: 3.7v
Number of Vibrations:
3 speeds+ 7 patterns
User time: Lowest level 55 minutes,
highest power 45 minutes
Sound Level: 50dB

CHARGING INSTRUCTIONS: This vibrator arrives partially charged at about 60 - 70%, so it is not necessary to charge before use. Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input. Initial charge will take about 50 minutes, and subsequent charges will take about 2 hours to complete. The LED light will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time. Charge lasts for about 55 minutes of play time on the lowest vibration level, and about 45 minutes of play time on the highest level. Toy vibration slows before stopping completely when charge is fully depleted. This toy operates at a sound level of 50db and a power level of 3.7V.

INSTRUCTIONS FOR USE: This toy can be operated with or without the remote control, but only the remote control can change the intensity of each function.

Without the remote control:

Turn the toy on by pressing the Power Button for at least 3 seconds. Press again for 1 second to start using toy.

Use the same Power Button to cycle through 7 speeds and functions of vibration.

Turn the toy off by pressing the Power Button for at least 3 seconds.

You can start the toy without the remote control, and then control it from the remote control after turning the remote on separately.

With the remote control:

Turn the toy on by pressing the Power Button on the remote for at least 3 seconds.

Use the Right Wave button to cycle through 7 speeds and functions of vibration. Use the Left Wave button to return to the first function, which is a constant speed.

Use the Plus and Minus buttons to increase or decrease the intensity of each function while you are in that function. There are three levels of intensity for each function.

Turn the toy off by pressing the Power Button for at least 3 seconds.

You can start the toy directly with its Power Button, and then control it from the remote control after turning the remote on separately.



USB RECHARGEABLE

