

## **Product Specifications:**

Category: Vibrator Material: Solid Silicone + ABS Size: W: 83mm, H: 163mm, D: 35mm Battery: Li-ion Battery Voltage: 3.7V Number of Vibrations: 10 frequencies User time: 60mins Sound Level: 52DB

## **CHARGING INSTRUCTIONS**

This vibrator arrives with an 80% partial charge, so it can be used immediately without charging.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

The initial charge will take about 80 minutes to complete, and subsequent

charges will also take about 80 minutes to complete.

The indicator light will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of

Charge lasts for about 1 hour of play time with average inflation function

This toy operates at a sound level of less than 52db and a voltage of 3.7V.

## INSTRUCTIONS FOR USE

This toy has an easy to use three-button control panel on its handle.

To turn toy on, press the // bottom button for at least 2 seconds. Once the toy is on, use the same button to cycle through 10 different speeds and

Acte intough to affecting speeds and functions.

The inflation function has two buttons. Use the O middle button to engage the inflation function.

Hold this button down for about 8 seconds to fully inflate the toy shaft to a maximum width of 1.98 inches. inches.

For quick release of the toy's inflation, use the O top button.
Press once and the toy will deflate immediately.

USB RECHARGEABLE



press the M bottom button for at least 2 seconds.