

<http://www.evolvednovelties.com/>

EVOLVED
Love is Back



Product Specifications:

Material: Silicone, ABS Plastic & Phthalate Free PVC materials.
Battery: Lithium
Top Voltage: 702050/800mAh/3.7v
Remote Voltage: 602030/300mAh/3.7v
Number of Vibrations: 7 vibration
User time: 100 mins.
Sound Level: 68db

CHARGING INSTRUCTIONS

This vibrator arrives with low partial charge, so it is recommended to fully charge before use. Connect the USB plug into the USB part of your computer or other output and the other end of the DC charger into toy's input. Initial charge will take about 3 hours and subsequent charges will also take about 3 hours to complete. The indicator light will be on while device is charging and turn off when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time. Charge lasts for about 130 minutes of play time on the lowest level of vibration, and about 100 minutes on the highest level. This toy operates at a sound level of 68 db with an 800mAh battery, at a voltage of 3.7V. The remote operates at 3.7V with a 300mAh battery.

INSTRUCTIONS FOR USE

This toy uses two 3-button control panels, one on the toy and one on the remote control.

TO OPERATE DIRECTLY ON TOY:

Use the bottom Power Button to turn the toy on by pressing it for at least 3 seconds. The toy will enter standby mode and the LED light will illuminate. Note: The remote control must be turned on separately with its Power Button.

Use the middle Vibration Button (with wavy lines) to operate and cycle through seven (7) vibrating speeds and functions. Press the button once to engage the motor which will begin at its lowest vibration. Then press the button once for each speed to a total of seven (7). The LED light will change to indicate each new speed. After the highest speed, the vibration will start again at the lowest speed. To end the vibration without turning off the toy or affecting the Thrusting function, press the Vibration button for at least two (2) seconds.

Use the top Thrusting Button (with arrows) to operate and cycle through three (3) thrusting functions. Press the button once to engage the motor which will begin at its slowest thrusting speed. Then press the button once again for each speed for a total of three (3). The LED light will change to indicate each new speed. After the highest thrusting speed, the thrusting motor will start again at the lowest speed. To end the thrusting without turning off the toy or affecting the Vibration motor, press the Thrusting button for at least two (2) seconds.

To turn off the toy, press the Power Button for at least two (2) seconds. Note: Turn off the remote control separately with its own Power Button.

TO OPERATE WITH REMOTE CONTROL:

Use the bottom Power Button to turn the toy on by pressing it for at least 3 seconds. The toy will enter standby mode and the LED light will illuminate. Note: The toy must be turned on separately with its Power Button.

Use the middle Vibration Button to operate and cycle through seven (7) vibrating speeds and functions. Press the button once to engage the motor which will begin at its lowest vibration. Then press the button once for each speed to a total of seven. The LED light will change to indicate each new speed. After the highest speed, the vibration will start again at the lowest speed. To end the vibration without turning off the toy or affecting the Thrusting function, press the Vibration button for at least two (2) seconds.

Use the top Thrusting Button (with arrows) to operate and cycle through three (3) thrusting functions. Press the button once to engage the motor which will begin at its slowest thrusting speed. Then press the button once again for each speed for a total of three (3). The LED light will change to indicate each new speed. After the highest thrusting speed, the thrusting motor will start again at the lowest speed. To end the thrusting without turning off the toy or affecting the Vibration motor, press the Thrusting button for at least two (2) seconds.

To turn off the remote control, press the Power Button for at least two (2) seconds. Note: Turn off the toy separately with its own Power Button.

HOW TO USE THE HANDS-FREE SUCTION CUP MOUNT:

Find a clean dry surface and press the powerful suction cup

onto the surface until you feel a secure grip. At the base of the toy is a silicone flap that pops out. Open the silicone flap and place the toy on top of the mount, sliding it in until you feel it lock. To remove the toy from the mount, use the two buttons on either side of the mount and press them together as you remove the toy.



USB RECHARGEABLE