

<http://www.evolvednovelties.com/>

EVOLVED
Love is Back



Product Specifications:

Material: Silicone + ABS
Battery: Li-ion battery,
3.7V/580mAh
Voltage: 3.7V
Number of Vibrations:
10 modes vibration,
5 speeds thumper,
5 speeds tongue licking
User time: 80~120minutes
Sound Level: <45 db

CHARGING INSTRUCTIONS

This vibrator arrives with a partial charge, so it is recommended to fully charge the toy before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about two (2) hours, and subsequent charges will also take about two (2) hours to complete.

The indicator light will pulse off and on while device is charging and light up solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about two hours (120 minutes) of play time on the lowest level of vibration with fewer functions active at once, and about eighty (80) minutes on the highest levels with all functions in use.

This toy operates at a sound level of 45db with an 580mAh battery, at a voltage of 3.7V.

INSTRUCTIONS FOR USE

This toy has three buttons at its base. While holding the toy with the main shaft pointing up and the control panel facing you, the buttons left to right control Tongue Function, Thumper Function and Vibration Function. Each function's motor can be operated separately or together in any combination.

① Press this Tongue Function button for at least three (3) seconds to engage the Tongue Function motor. Press the button again more quickly to cycle through five (5) tongue vibrating speeds. Hold this button for another three (3) seconds to turn the Tongue Function motor off.

② Press this Thumper Function button for at least three (3) seconds to engage the Thumper Function motor in the shaft. Press the button again more quickly to cycle through five (5) thumping speeds. Hold this button for another three (3) seconds to turn the Thumper Function motor off.

③ Press this Vibration Function button for at least three (3) seconds to engage the shaft Vibration Function motor. Press the button again more quickly to cycle through ten (10) vibrating speeds and functions. Hold this button for another three (3) seconds to turn the Vibration Function motor off.



USB RECHARGEABLE

ATTACH USB
CHARGER
TO PRONGS