

**Product Specifications:** 

Material: Silicone & ABS Plastic Battery: 1 rechargeable

Voltage: 3.7V

Number of Vibrations: 10 Patterns Number of Rotation: 3 Speeds

User time: 60 minutes Sound Level: <50 db

CHARGING INSTRUCTIONS: This vibrator arrives with partial charge, so it is recommended to fully

CHARGING INSTRUCTIONS: This vibrator arrives with partial energe, so it is recommended to low, charge before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge takes 60 minutes, and subsequent charges will take about 90 minutes to complete. The indicator light will flash on toy while device is charging and become solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 90 minutes of play time on the lowest level of vibration, and about 60 minutes on the highest level.

This toy operates at a sound level of less than 50db with a lithium battery at a voltage of 3.7V.

The remote control is not rechargeable and comes with a cell lithium CR2032 battery.

CR2032 battery.

INSTRUCTIONS FOR USE: This toy can be operated directly with the button at its base, or with the three buttons on its remote control. Important note: You cannot turn the toy ON or OFF with the remote control. Use the button directly on the toy to power it on. OPERATE WITH TOY DIRECTLY Press the Power Button at toy's base for at least 2 seconds to turn

Press the Power Button at toy's base for at least 2 seconds to turn toy on.

Press the Power Button again more quickly to cycle through 10 different vibration speeds and functions. As the vibration functions cycle, the rotation function cycles with it, simultaneously. Rotation will begin at its lowest speed and increase in speed with each button press, At the fourth button press, the rotation function goes back to the lowest speed.

To operate vibration and rotation separately, use the remote control.

To turn toy off, press Power Button for at least 2 seconds.

control.
To turn toy off, press Power Button for at least 2 seconds.

OPERATE WITH REMOTE CONTROL
Once the toy is on (by using the button at its base), press the Power Button on the remote control for at least 2 seconds to turn it on. The toy will now be

in standby mode.

Press the Vibration Function Button on remote for 2 seconds to engage the vibration function. Press it again to cycle through 10 different vibration

vibration functions. Tress in upon the state state speeds and functions.

Press the Rotation Button on remote for 2 seconds to engage the rotation function. Press it again to cycle through 3 different rotation speeds.

Press the Power Button again for 2 seconds to turn the remote control off.

INSERT CHARGER HERE

**USB RECHARGEABLE**