

<http://www.evolvednannies.com/>
EVOLVED
Love is Back



Product Specifications:

Material: Silicone+ ABS
Battery: Lithium battery
Voltage: 3.7V
Number of Vibrations: 10
User time: 90 minutes
Sound Level: ≤50 db

CHARGING INSTRUCTIONS: This vibrator arrives with a low partial charge, so it is recommended to charge before first use. Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input, located at the base of the toy, beside the Power Button. Initial and subsequent charges will take about 135 minutes to complete. The indicator light will flash on toy while device is charging and become solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 150 minutes of play time on the lowest level of vibration, and about 90 minutes on the highest level. This toy operates at a sound level of less than 50db with a lithium battery at a voltage of 3.7V. The remote control uses 2 x AAA batteries, not included.



INSERT
CHARGER
HERE

INSTRUCTIONS FOR USE: This toy can be operated directly with the button at its base, or with the two buttons on its remote control. Important note: You cannot turn the toy ON or OFF with the remote control, but you can put it in standby mode. Use the button directly on the toy to power it on and off.

OPERATE WITH TOY DIRECTLY: Press the Power Button at the bottom of toy's base for at least 3 seconds to turn toy on.

Press the Power Button again more quickly to cycle through 10 different vibration speeds and functions. Once the toy is on, you may power on the remote and use its buttons to operate vibrations and functions separately.

To turn toy off, press Power Button for at least 3 seconds.

OPERATE WITH REMOTE CONTROL: Once the toy is on (by using the button at its base), press the Power Button on remote for at least 3 seconds to turn on the remote control.

Use the Function Button on remote to cycle through 10 different vibration speeds and functions.

Press the Power Button again for 3 seconds to turn off the remote control, which will put the toy in standby mode. The toy must be turned off directly with its own button.

USB RECHARGEABLE

