

<http://www.genderx.com/>

GENDER X



Product Specifications:

Material: Silicone & ABS Plastic
Battery: 750mAh rechargeable lithium battery, 1xAAA battery for remote
Voltage: 3.7V
Number of Vibrations: 10
User time: 2 Hours
Sound Level: Less than 50 dB

CHARGING INSTRUCTIONS

This vibrator arrives with low partial charge, so it is recommended to fully charge before use. Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input. Initial charge will take about an hour to complete and subsequent charges will take about 2.5 hours to complete.

The indicator light will flash on toy while device is charging and become solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 90 minutes of play time on the lowest level of vibration, and about 60 minutes on the highest level.

This toy operates at a sound level of less than 50db with a 750mAh Lithium battery at a voltage of 3.7V.

The remote control operates with a single AAA battery, not included.

INSTRUCTIONS FOR USE

This toy can be operated directly with the button at its base, or with the two buttons on its remote control. Important note: You cannot turn the toy ON or OFF with the remote control. Use the button directly on the toy to power it on.

OPERATE WITH TOY DIRECTLY

Press the bottom button at side of toy's base for at least 2 seconds to turn toy on. The LED light will illuminate and the toy will be in standby mode.

Once the toy is in standby, press the bottom button again more quickly to cycle through 10 different vibration speeds and functions in the bottom motor.

Once the toy is in standby, press the top button quickly to cycle through 10 different vibration speeds and functions in the top motor.


Once the toy is on, you may power on the remote and use its buttons to operate vibrations and functions separately. To turn toy off, press bottom button for at least 2 seconds.

OPERATE WITH REMOTE CONTROL

Once the toy is on (by using the button at base of toy), press the power button quickly to cycle through 10 different vibration speeds and functions in the bottom motor, including standby.

Use the remote's top button to cycle through 10 different vibration speeds and functions in the top motor by pressing the button once quickly for each speed, including standby.

Press the power button again for 2 seconds to put the remote and toy in standby mode (no matter what speed it's on), during which time you can engage the toy again within 30 minutes. After 30 minutes, the toy and the remote will power off automatically.

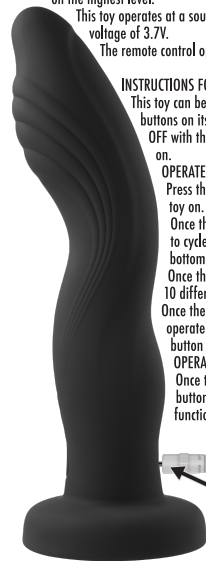

USB RECHARGEABLE