

<http://www.evolvednovelties.com/>

EVOLVED
Love is Back



Product Specifications:

Material: Silicone, ABS plastic
Battery: Lithium battery,
102235 750mah
Voltage: 3.7V
Number of Functions:
10 modes of tapping +
10 modes of pulling
User time: 45-60 minutes
Sound Level: ≤60DB @ 50cm

CHARGING INSTRUCTIONS

This vibrator arrives with partial charge, so it is recommended to fully charge before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger onto the magnetic pins at the base of the toy under the control panel.

Initial and subsequent charges will take about 2 hours to complete.

The green indicator light will flash while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 60 minutes of play time on the lowest level of vibration, and about 45 minutes on the highest level.

This toy operates at a sound level of 60 db with an 750mAh battery, at a voltage of 3.7V.

INSTRUCTIONS FOR USE

This toy operates with a 4-button control panel on its handle.

Use the top power button to turn the toy on by pressing it for at least 3 seconds.


The toy will enter standby mode and the green LED light will illuminate.

Press the tapping button on the right for at least 2 seconds to engage the tapping motor in the thick base. The motor will begin in standby. Press it again more quickly to cycle through 10 speeds and functions, as well as the off position.

Press the come-hither button on the left for at least 2 seconds to engage the come-hither motor in the long shaft. The motor will begin in standby. Press it again more quickly to cycle through 10 speeds and functions, as well as the off position.

Use the turbo boost button at the bottom to immediately engage a blast of maximum motor power with both motors working together. Press the button again to disengage turbo mode.

To Turn off the toy, press the top power button for at least 3 seconds.

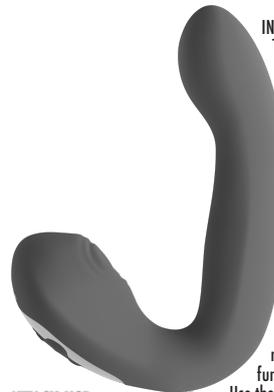

ATTACH USB
CHARGER
TO PRONGS

USB RECHARGEABLE

