

Product Specifications:

Material: Premium silicone Battery: Lithium battery, 802530, 500mAh/3.7V Voltage: 3.7V

Number of Vibrations: 10 User time: 100 - 120 minutes Sound Level: ≤60dbs

CHARGING INSTRUCTIONS

ATTACH USB CHARGER TO PRONGS

This toy arrives with a high partial charge, but it is recommended to charge fully before first use.

To charge, connect the USB plug into a power source and the DC charger end onto the magnetic pins at the bottom of the toy's base. Initial charge will take about 90 minutes and subsequent charges will take about 2 hours to complete.

The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time. Please note that the light above the button is only visible in dim or dark lighting and can't be seen in well-lit environments.

Charge lasts for about 100 minutes of play time at the highest level of vibration, and about 120 minutes at the lowest level.

This toy operates at a sound level of less than 60db with a 500mAh rechargeable lithium battery at 3.7V.

INSTRUCTIONS FOR USE

This toy has a convenient 1-button control at the side of its base.
To turn toy on, press the button for about 2 seconds. The LED light will go on and toy

To turn toy on, press the button for about 2 seconds. The LED light will go on and toy will begin vibrating at its first lowest frequency. Press the button again, a single time for each new speed or function for a total of 10.

To turn toy off, press button for about 2 seconds.

USB RECHARGEABLE