

PLAYBOY

Pleasure

Product Specifications:

Material: Silicone & ABS Plastic
Battery: Lithium battery
Voltage: 3.7V
Number of Vibrations: 10
User time: 50 - 65 minutes
Sound Level: <55dbs



USB
RECHARGEABLE

CHARGING INSTRUCTIONS

This toy arrives with a 70-80% charge, so it is not necessary to charge before first use. If you do charge it right away, the initial charge will take about 20 minutes and subsequent charges will take about 50 minutes to complete.

To charge, connect the USB plug into your USB power source and the DC charger into the port located at the thick end of the toy's safety base. The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 50 minutes of play time at the highest level of vibration, and about 65 minutes at the lowest level.

This toy operates at a sound level of less than 55db with a lithium battery at 3.7V.

INSTRUCTIONS FOR USE

This toy has a convenient 1-button control at the base of its handle, and a 1-button control on the remote. Note: The toy can only be turned on and off with the button directly on the toy. The remote operates the motor once the toy is turned on, and can also put the toy in standby.

To turn toy on, press the button on toy for at least 3 seconds. The LED light will turn on and toy will begin in standby mode. Press the button again, a single time for each new speed or rhythm for a total of 10. Once the toy is turned on, use the remote control by pressing its button for at least 2 seconds to turn it on. The light will go on, and the button can be pressed again more quickly to cycle through 10 speeds and rhythms up to 10. Turn the remote off by pressing the button for at least 2 seconds. This will put the toy in standby mode.

To turn toy off completely, press its button directly for at least 3 seconds.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure - Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries. Avoid use with silicone or oil-based lubricants as it will degrade the material overtime.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use. Avoid prolonged exposure to sunlight and extreme heat.
3. Clean your vibrator after every use with Playboy Pleasure - Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

CONTAINS BATTERY
AND MUST BE RECYCLED



Li-ion