

PLAYBOY

Pleasure

Product Specifications:

Material: Silicone & ABS Plastic
Battery: Lithium battery
Voltage: 3.7V
Number of Vibrations: 7
User time: 50 minutes
Sound Level: <50db



CHARGING INSTRUCTIONS

This toy arrives with a high partial charge between 70% – 80%, so it is not necessary to fully charge it before first use. If you choose to charge it, the first charge will take about 30 minutes and subsequent charges will take about 90 minutes to complete.

To charge, connect the USB cable to your USB power source and the other end into the toy's port at the top of the toy's base behind the main shaft.

The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging but it's recommended not to overcharge for long periods of time.

Charge lasts for about 80 minutes of play time on the lowest level of vibration and about 50 minutes on the highest level.

This toy operates at a sound level of less than 50db with a rechargeable battery at 3.7V.

INSTRUCTIONS FOR USE

This toy has a 1-button control at its base, and 1-button control on its remote.

To turn toy on or off, press the button on toy for about 3 seconds. The light will turn on, the tapping and vibration motors will be in standby, and the heating function will automatically begin, heating to a max temperature of between 109° and 113° Fahrenheit. Press the button again more quickly to engage vibration and tapping motors, which operate together. Each press of the button advances to a new speed or rhythm, for a total of 7.

Turn the remote control on or off by pressing its button for about 3 seconds. Please note that the toy cannot be turned on via remote control. The button directly on the toy must be pressed first, then once toy is in standby mode, the remote is able to operate the tapping and vibration functions by pressing the button quickly to advance through all 7 functions. Hold button on remote for 3 seconds to turn off and put toy into standby mode.

Please note that the heating function cannot be controlled independently.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure – Slick; H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries. Avoid use with silicone or oil-based lubricants as it will degrade the material overtime.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use. Avoid prolonged exposure to sunlight and extreme heat.
3. Clean your vibrator after every use with Playboy Pleasure – Clean Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

CONTAINS BATTERY
AND MUST BE RECYCLED



Li-ion