

PLAYBOY

Pleasure

Product Specifications:

Material: Silicone & ABS Plastic
Battery: Lithium-ion battery cells
Voltage: working voltage 3.7 V, charging voltage 5V
Number of Vibrations: 10
User time: 120 minutes
Sound Level: <50dbs



RECHARGEABLE

CHARGING INSTRUCTIONS

This vibrator arrives with partial charge of about 50%, so it is recommended to charge fully before first use.

Connect the USB plug into your USB power source and the other end of the DC charger onto the toy's magnetic charging pins, located at the bottom of the curve.

Initial charge will take about 120 minutes to complete, subsequent charges will take about 100 minutes.

The indicator light will flash while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging but it's recommended not to overcharge for long periods of time.

Charge durations:

Single tapping or vibration at highest level: 150 minutes

Single tapping or vibration at lowest level: 200 minutes

Tapping & vibration at highest level simultaneously: 90 minutes

Tapping & vibration at lowest level simultaneously: 120 minutes

This toy operates at a sound level of about 50db with a lithium battery at a working voltage of 3.7 and a charging voltage of 5V.

INSTRUCTIONS FOR USE

This tapping palm vibrator is operated with a 2-button panel located along the ridge of the crescent-shaped front. Each button controls a separate motor with its own on/off function. The circle symbol operates the tapping function while the wavy line operates vibration.

Press the circle for at least 1.5 seconds to turn the tapping motor on. The LED light will go on and the motor will begin in standby. Click again more quickly to cycle through a total of 10 tapping speeds and rhythms. Press again for 1.5 seconds to turn tapping motor off.

Press the wavy line for at least 1.5 seconds to turn the vibration motor on. The LED light will go on and the motor will begin in standby. Click again more quickly to cycle through a total of 10 vibration speeds and rhythms. Press again for 1.5 seconds to turn vibration motor off.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure - Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries. Avoid use with silicone or oil-based lubricants as it will degrade the material overtime.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use. Avoid prolonged exposure to sunlight and extreme heat.
3. Clean your vibrator after every use with Playboy Pleasure - Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

CONTAINS BATTERY
AND MUST BE RECYCLED



Li-ion