

PLAYBOY

Pleasure

Product Specifications:

Material: Silicone & ABS Plastic
Battery: LiCoMnNiO2
Voltage: 3.7-5 V
Number of Vibrations: 7
User time: 90 - 110 minutes
Sound Level: <60dbs



CHARGING INSTRUCTIONS

This vibrator arrives with partial charge, so it is recommended to charge for about 30 minutes before first use. It does not need to be fully charged before use, but it must be charged at least every 12 months to keep battery active. Connect the USB plug into a USB power source and the other end of the charger onto the magnetic pins located at the back of the toy's handle base.

A full charge will take about 200 minutes to complete. The indicator light will flash while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time. Charge lasts for about 110 minutes of play time on the lowest level of vibration and function and 90 minutes on the highest level. This toy operates at a sound level of 60db at a voltage of 3.7V.

INSTRUCTIONS FOR USE

This toy is operated with a 3-button panel located at the bottom front of the toy's handle. The top power button turns the toy on, the middle button (vertical wavy lines) operates the up and down ring movement, and the bottom button (horizontal wavy lines) operates both vibration motors (one in main shaft, one in rabbit shaft) together.

Press the top power button for at least 2 seconds to turn the toy on. The LED light will illuminate, and all motors will be in standby mode.

Press the middle button to engage the up and down ring motor in the main shaft. Its light will go on and ring movement will begin at its lowest speed. Press the button again to cycle through 3 up and down speeds. Press this button for 2 seconds to turn the ring movement off.

Press the bottom button to engage the two vibration motors, one in each shaft (main shaft and bunny stimulator). Its light will go on and vibration will begin at its lowest speed. Press the button again to cycle through 10 speeds and rhythms. Press this button for 2 seconds to turn the vibration off in both motors.

Press the top power button again for at least 2 seconds to turn the toy off completely.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure - Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries. Avoid use with silicone or oil-based lubricants as it will degrade the material overtime.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use. Avoid prolonged exposure to sunlight and extreme heat.
3. Clean your vibrator after every use with Playboy Pleasure - Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

