

# PLAYBOY

## *Pleasure*

### Product Specifications:

Material: Silicone & ABS Plastic  
Battery: 102045 900mAh 3.7V  
Voltage: 3.7V  
Number of Vibrations: 3 speeds of tapping, 10 modes of vibration  
User time: 50 - 60 minutes  
Sound Level: ≤60db



### CHARGING INSTRUCTIONS

This vibrator arrives with partial charge, so it is recommended to charge before first use. Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger port located at the base of the back of the toy's handle. Initial charge will take about 2 hours, subsequent charges about 3 hours to complete.

The indicator light will flash while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 50 minutes of play time on the lowest level of vibration and function and 60 minutes on the highest level.

This toy operates at a sound level of 60db with a 900mAh battery at a voltage of 3.7V.

### INSTRUCTIONS FOR USE

This toy is operated with a 3-button panel located at the bottom front of the toy's handle.

Press the middle button for at least 2 seconds to turn the toy on. The LED light will illuminate, and all motors will be in standby mode.

Press the top button to engage the tapping motor at the head of the main shaft. Its light will go on and tapping will begin at its lowest speed. Press the button again to cycle through 3 tapping speeds. Press this button for 2 seconds to turn the tapping off.

Press the bottom button to engage the two vibration motors, one in each shaft (main shaft and bunny stimulator). Its light will go on and vibration will begin at its lowest speed. Press the button again to cycle through 10 speeds and rhythms. Press this button for 2 seconds to turn the vibration off.

Press the middle power button again for at least 2 seconds to turn the toy off completely.

### VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure - Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries. Avoid use with silicone or oil-based lubricants as it will degrade the material over time.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use. Avoid prolonged exposure to sunlight and extreme heat.
3. Clean your vibrator after every use with Playboy Pleasure - Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

