

# PLAYBOY

## *Pleasure*

### Product Specifications:

Material: Silicone & ABS Plastic  
Battery: 1200mAh Lithium Battery  
Voltage: 3.7v  
Number of Vibrations: 10  
User time: 70 minutes  
Sound Level: <60dbs



### CHARGING INSTRUCTIONS

This vibrator arrives with a low partial charge, so it is recommended to charge fully before first use.

Connect the USB plug into a USB power source, and the other end of the charger onto the toy's magnetic charging pins, located on the control panel at the front of the toy's handle.

Initial and subsequent charges will take about 180 minutes to complete.

The indicator light will flash while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging but it's recommended not to overcharge for long periods of time.

Charge lasts for about 180 minutes of play time on the lowest level of vibration, and about 70 minutes on the highest level.

This toy operates at a sound level of about 60db with 1200 mAh Lithium battery at a voltage of 3.7.

### INSTRUCTIONS FOR USE

This dual vibrator operates with a 3-button panel located on the front center of the main shaft. Each button controls a separate motor with its own on/off function. The bottom (power) button controls the thrusting and vibrating in the main shaft, the middle (function) button controls the vibration in the rabbit shaft, and the top (heating) button controls the heating function in the head of the main shaft.

Press the bottom button for at least 2 seconds to turn on the thrusting and vibration in the main shaft. The LED light will go on and the motor will begin in standby. Click again more quickly to cycle through a total of 10 speeds and rhythms, and standby.

Press the middle button to turn on the vibration in the rabbit shaft. The LED light will flash and the motor will begin in its first speed. Click again more quickly to cycle through a total of 10 speeds and rhythms, and standby.

Press the top button to turn on heating function in the head of the main shaft. The LED light will flash and heating will begin, heating to a maximum temperature of 104° Fahrenheit.

### VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure - Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries. Avoid use with silicone or oil-based lubricants as it will degrade the material overtime.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use. Avoid prolonged exposure to sunlight and extreme heat.
3. Clean your vibrator after every use with Playboy Pleasure - Clean-Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

