

# PLAYBOY

## *Pleasure*

### Product Specifications:

Material: Silicone & ABS Plastic  
Battery: Lithium battery 102045 900mah  
Voltage: 3.7V  
Number of Vibrations: 3 thrusting + 7 vibration + 10 tapping  
User time: 60 minutes  
Sound Level: ≤60db



### CHARGING INSTRUCTIONS

This vibrator arrives with high partial charge, but it is recommended to charge fully before first use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger onto toy's magnetic pins located at the handle's base.

Initial charge will take about an hour, and subsequent charges will take about 90 minutes to complete.

The indicator light will flash while device is charging and turn solid when toy is fully charged. There is no danger of battery damage by overcharging but it's recommended not to keep charging for long periods of time.

Charge lasts for about 65 minutes of play time on the lowest level of vibration, and about 60 minutes on the highest level.

This toy operates at a sound level of about 60db with a 900mAh lithium battery at a voltage of 3.7.

### INSTRUCTIONS FOR USE

This triple stimulation vibrator is operated with an easy-to-use 4-button panel located on the front of the handle. The power button turns the toy on and off, while each function button controls a separate motor with its own on/off ability.

Press the bottom power button for at least 2 seconds to turn the toy on and put all motors in standby.

The left button controls the vibration motor in the main shaft. Press to engage the motor (LED light will go on) and click again more quickly to cycle through a total of 7 vibration speeds and functions, including off.

The top button controls the thrusting function in the main shaft. Press to engage the motor (LED light will go on) and click again more quickly to cycle through a total of 3 thrusting speeds including off.

The right button controls the flapping shaft between the main and lower shafts. Press to engage flapping function (LED light will go on) and click again more quickly to cycle through a total of 10 flapping speeds including off.

Press the bottom power button for at least 2 seconds to turn the toy off, which turns off all motors.

### VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure – Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries. Avoid use with silicone or oil-based lubricants as it will degrade the material overtime.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use. Avoid prolonged exposure to sunlight and extreme heat.
3. Clean your vibrator after every use with Playboy Pleasure – Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

CONTAINS BATTERY  
AND MUST BE RECYCLED

