

Product Specifications:

Category: Vibrator User: Women Material: Silicone & ABS Matter + partial plating
Size: H: 7.75" W: 5 1.4" D: 1.2"
Battery: built-in Li battery
Voltage: 3.7V
Number of Vibrations: 10 User time: 2 years or more under non-artificial damage Sound Level: 50-60DB

CHARGING INSTRUCTIONS

This vibrator arrives charged at about 60% capacity, so it is not necessary to charge before use.

Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into

Initial charge will take about 2 hours, and subsequent

that that ye will take about 2 hours to complete.

The indicator light will flash while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging. Charge lasts for about 2 hours of play time at

the lowest level and about 1.5 hours at the highest level. Toy vibration slows quickly, then stops completely when battery power falls below 2.4V.

This toy operates at a sound level of 50-60db

INSTRUCTIONS FOR USE

To turn toy on, press the bottom power button for at least two seconds.

Once toy is turned on, press the top button to cycle through different vibration speeds and functions in the main shaft.

When toy is turned on, the blue LED light in silver shaft will light up, then when top function button is pressed to cycle through vibrations and functions, the blue LED light will flash in different patterns accordingly.

LED light indicator will remain on when toy is in operation.

To turn toy off, press bottom power button for at least two