

Product Specifications:

Category: Vibrator
Material: ABS+Silicone
Size: W: 20mm, H: 100mm,
D: 20mm
Battery: 170mA
Voltage: 3.1∼4.2V
Number of Vibrations: 3 speeds
and 4 patterns
User time: >40 minutes
Sound Level: ≤ 55Db



CHARGING INSTRUCTIONS

This petite vibe arrives with a partial charge, so it is not necessary to charge before use.

Connect the ÚSB plug into the USB port of your computer or other output and fit the other end of the DC charger into toy's input for a secure fit. Initial charge will take about 90 minutes, and subsequent charges will also take about 90 minutes to complete

The indicator light will blink while device is charging, and turn solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 60 minutes of play time on

the lowest vibration level, and about 40 minutes of play time on the highest level.

Toy vibration stops completely when charge begins

to deplete.

This toy comes with a rechargeable battery that

This foy comes with a rechargeable battery that operates at 170mAh. It vibrates at a sound level of 55 db.



INSTRUCTIONS FOR USE

This toy has a simple, one-button control.
To turn toy on, press the button for at least 3 seconds. The toy will start with its first pattern, a low vibration.

Once toy is turned on, press the same button to cycle through 3 speeds and 4 functions.
To turn toy off, press button for at least 3 seconds.

RECHARGEABLE