Product Specifications:



Category: Vibrator User: Women Material: Silicone +ABS Size: H: 72mm W: 53mm D: 53mm Battery: Lithium battery Voltage: DC 3.7V Number of Vibrations: 10 frequency vibrations User time: About 1 hour Sound Level: Lower than 40dbs

CHARGING INSTRUCTIONS

This vibrator arrives with a partial charge, but it is recommended to charge before use.

connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.

Initial charge will take about 70 minutes, and subsequent charges will also take about 70 minutes to complete.



The indicator light will flash while device is The indicator light will that while device is charging, and remain solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 65 minutes of play time on the lowest level of vibration, and about 40 minutes on the highest level.

To wibration reduces when charge begins to

Toy vibration reduces when charge begins to

deplete. This toy operates at a sound level of 40db with a 3.7V battery



INSTRUCTIONS FOR USE

This toy has a convenient one-button control at its center line.

at its center line.
To turn toy on, press the button for at least 3 seconds. The light will turn on and toy will begin vibrating at its first lowest frequency. Once the toy is on, press the button a single time for each new speed or function for a total of 10. The toy vibrations are synched with the rotating bead function. They are controlled USB RECHARGEABLE together.

together. To turn toy off, press power button for at least 3 seconds.



