

Product Specifications:

Material: Silicone & ABS Battery: Lithium-lon battery Voltage: 4V Number of Vibrations: 10 User time: 60 Minutes

Sound Level: <45dB

CHARGING INSTRUCTIONS

This toy arrives charged, so it is not necessary to charge before first use. Initial charge will take about 2 hours, subsequent charges about 90 minutes. Charge lasts for 60 minutes of play

To charge, connect the USB plug into a power source and the DC charger into the port at the base of the toy's handle. The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

This toy operates at a sound level of less than 45db with a rechargeable lithium battery at a voltage of 4V



INSTRUCTIONS FOR USE

- 1. Press the button at the front of the toy's base for 2 seconds to turn toy on. The LED light will turn on and toy will begin in standby mode. Press the button once to begin vibrating at its first lowest frequency.
- 2. Press button again to cycle through 10 speeds and patterns.
- 3. To turn toy off, press button for at least 2 seconds.