

Product Specifications:

Material: Silicone & ABS Battery: Lithium battery Voltage: 3.7V Number of Vibrations: 10 User time: 50 - 70 Minutes

Sound Level: <45db

CHARGING INSTRUCTIONS

It is recommended to charge this toy before first use. The initial charge will take about 2 hours, and subsequent charges about 90 minutes. Charge lasts for 50 minutes of playtime at the highest speed and 70 minutes at the lowest speed of vibration.

highest speed and 70 minutes at the lowest speed of vibration.

To charge, connect the USB plug into a power source and the DC charger onto the magnetic charging pins at the base of the toy's handle. The indicator light will flash while device is charging and stay constant when toy is fully charged.

This toy operates at a sound level of less than 45db with a rechargeable lithium battery at a voltage of 3.7V.

INSTRUCTIONS FOR USE

1. Press the button at the toy's base for 2 seconds to turn the toy on. The button will light up and toy will begin vibrating at its first lowest frequency.

frequency.
2. Press button again to cycle through 3 speeds & 7 patterns.

3. To turn toy off, press button for at least 2 seconds. Vibration will stop and light will turn off.

ATTACH USB CHARGER TO PRONGS

USB RECHARGEABLE