

PLAYBOY

Pleasure

Product Specifications:

Material: Silicone & ABS
Battery: 102045 900mah
Voltage: 3.7V
Number of Vibrations: 7 vibrating, 7 Flapping
User time: 50 - 60 Minutes
Sound Level: ≤60db



CHARGING INSTRUCTIONS

It is recommended to charge before first use. Initial charge will take about 1 hour, subsequent charges about 2 hours. Charge lasts for 50 minutes of playtime at the highest speed and 60 minutes at the lowest speed.

To charge, connect the USB plug into a power source and the DC charger into the port at the bottom of the toy's base. The indicator light will flash while device is charging and stay constant when toy is fully charged.

This toy operates at a sound level of less than 60db with a rechargeable 900mAh lithium battery at a voltage of 3.7V.

INSTRUCTIONS FOR USE

1. The control panel is located at the side of the toy's handle.
2. Press the middle button for 3 seconds to turn toy on. The button will light up and all 3 motors will be in standby.
3. Press the middle button again more quickly to cycle through 7 vibrating speeds and rhythms in the main shaft. The 8th press will go back to standby.

VIBRATOR CARE INSTRUCTIONS

1. Compatible with Playboy Pleasure - Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries.
2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use.
3. Clean your vibrator after every use with Playboy Pleasure - Clean: Foaming Toy Cleaner and a warm water rinse. Dry thoroughly before storage.
4. Store your vibrator in a cool, dry place separated from other toys, as toy materials sometimes react chemically with each other.

