

Product Specifications:

Material: Silicone & ABS Plastic Battery: 102540, 1200mAh

Voltage: 3.7V

Number of Functions: 7 Thrusting,

8 Vibration

User time: 45 - 60 Minutes Sound Level: ≤55dB

CHARGING INSTRUCTIONS

This vibrator arrives with low partial charge, so it is recommended to fully charge before use. Connect the USB plug into a power source and the other end of the DC charger onto toy's magnetic charging pins at the bottom of the suction cup alsos will take about a charge of the charge of the charge of the charge. The indicator light will flash on toy while device is charging and become solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 1 hour of play time on the lowest level of vibration, and about 45 minutes on the highest level.

This toy operates at a sound level of less than 55db with a 1200mAh lithium battery at a voltage of 3.7V.

The remote control operates with a CR2032 battery, included and pre-installed.

The remote control operates with a CR2032 battery, included and pre-installed.

INSTRUCTIONS FOR USE
This toy can be operated directly with the two buttons at the bottom of the suction cup base, or with the three buttons on its remote control. Important note: You cannot turn the toy Nor OF Fc completely with the remote control, though you can put it in standby. Use the button directly on the toy to power it on and off.

OPERATE WITH TOY DIRECTLY
Press the Power Button at the bottom of the suction cup base for at least 2 seconds to turn toy on. The light will turn on and toy will be in standby mode. Press the Power Button again more quickly to cycle through 7 different livining. A thrusting speeds and patterns in the main short, including off.

Once the toy is on using the Vibration Button, press the vibration Button once to engage the vibration motor. Press it again more quickly to cycle through 8 speeds and patterns.

Once the toy is on, you may power on the remote and use its buttons to operate vibrations and twirling, /thrusting. To turn toy off completely, press Power Button for at least 2 seconds. Light will turn off and both motors will stop.

OPERATE WITH REMOTE CONTROL
Once the toy is on, you may power on the remote and use its buttons to operate vibrations and twirling, /thrusting. To turn toy off completely, press the toy is on the push of the push of the push of the push of the toy is on the push of the push of

USB RECHARGEABLE

ATTACH USB CHARGER TO PRONGS