

**Product Specifications:** 

Material: Silicone Battery: Li-ion battery

YL751525,240mAh,0.88Wh,4.7g

Voltage: 3.7V

Number of Vibrations: 10 User time: 35 - 50 Minutes Sound Level: <60DB

## **CHARGING INSTRUCTIONS**

CHARGING INSTRUCTIONS
It is recommended to use up the existing battery power first before initial charge to prolong battery life. Repeat the full-discharge/recharge cycle 3 times for maximum longevity. A full charge will take about 90 minutes. Charge lasts for 35 minutes of playtime at the highest speed and 50 minutes at the lowest speed.

To charge, connect the USB plug into a power source and the DC charger onto the charging pins at the base of the toy. The indicator light will flash while device is charging and stay constant when toy is fully charged.

This toy operates at a sound level of less

This toy operates at a sound level of less than 60db with a rechargeable 240mAh lithium battery at a voltage of 3.7V.

ATTACH USB CHARGER TO PRONGS

INSTRUCTIONS FOR USE

1. Press the button at the toy's base for 2-3 seconds to turn toy on. The button will light up and toy will begin vibrating at its first

lowest frequency.

2. Press button again for 0.5 seconds at a time to cycle through 10 speeds and patterns. 3. To turn toy off, press button for

at 2-3 seconds.

USB RECHARGEABLE