

Product Specifications:

Material: Silicone & ABS Battery: Lithium battery Voltage: 3.7V Number of Vibrations: 10 User time: 50 - 70 Minutes

Sound Level: <45db

CHARGING INSTRUCTION

It is recommended to charge before first use. Initial charge will take about 2 hours, subsequent charges about 90 minutes. Charge lasts for 50 minutes of play time at the highest speed and 70 minutes at the lowest speed.

To charge, connect the USB plug into a power source and the DC charger into the port at the base of the toy's handle. The indicator light will flash while device is charging and stay constant when toy is fully charged.

This toy operates at a sound level of less than 45db with a rechargeable lithium battery at a voltage of 4V.

INSTRUCTIONS FOR USE

1. Press the button at the toy's base for 2 seconds to turn the toy on. The button will light up and toy will begin vibrating at its first lowest frequency.

2. Press button again to cycle through 3

speeds & 7 patterns.

3. To turn toy off, press button for at least 2 seconds. Vibration will stop and light will turn off.

USB RECHARGEABLE

INSERT Charger