

## **Product Specifications:**

Material: Silicone & ABS
Battery: 851350 500mAH
Voltage: 3.7V
Number of Vibrations: 8
User time: 60 − 90 minutes
Sound Level: ≤55dB

## CHARGING INSTRUCTIONS

It is recommended to charge this toy fully before first use. To charge, unscrew the protective cap at the base of the handle and plug the toy directly into a USB power source. Initial charge will take about an hour, subsequent charges about 2 hours to complete. The indicator light will flash while device is charging and stay constant when toy is fully charged.

complete. The indicator light with tash while device is charging and stay constant when toy is fully charged.

Charge lasts for 60 minutes of playtime at the highest speed and 90 minutes at the lowest speed. This toy operates at a sound level of less than 55db with a rechargeable 500mAh lithium battery at a voltage of 3.7V.

## INSTRUCTIONS FOR USE

- 1. The 2-button control panel is located at the front of the toy's handle. Each motor has its own button top button controls the plug, bottom button controls the mini-vibe.
- mini-vibe.

  2. Press the top button for 2 seconds to engage vibration in the beaded plug. The light will turn on and vibration in the plug will begin at its lowest frequency. Press again more quickly to cycle through 8 speeds and patterns of vibration. Press again for 2 seconds to turn the plug motor off. The light will turn off and vibration will cense.
- Teases. 3. Press the bottom button for 2 seconds to engage vibration in the mini-vibe. The light will turn on and vibration in the mini-vibe will begin at its lowest frequency. Press again more quickly to cycle through 8 speeds and patterns of vibration. Press again for 2 seconds to turn the mini-vibe motor off. The light will turn off and vibration will cease.

