

Product Specifications:

Material: Silicone & ABS Battery: 102040lithium polymer battery 800mAh

Voltage: 3.7V

Number of Vibrations: 10 User time: 50 - 60 minutes Sound Level: <50db

CHARGING INSTRUCTION

It is recommended to charge before first use. To charge, connect the USB cable to a power source and place the DC end onto the magnetic charging pins at the back of the toy's flicking end. The light flashes when the toy is charging and turns solid when complete. Initial charge will take 150 minutes and subsequent charges about 120 minutes to complete.

ATTACH USB CHARGER TO PRONGS Battery charge lasts for about 1 hour on the lowest frequency, and 50 minutes on the highest frequency. This toy operates at a sound level of less than 50db with an 800mAh lithium battery at 3.7V.

INSTRUCTIONS FOR USE

- 1. The 2-button control panel is located on the lower inside curve of the G-spot shaft. Each button operates its own motor.
- 2. Press the power button for 3 seconds to turn toy on. The light will turn on and vibration and flicking motors will begin in standby.
- 3. Press the power button again to cycle through 10 speeds and patterns of vibration in the G-spot shaft.
- 4. Press the flicking button to engage function in the flicking shaft. The button will light up and flicking will begin at the slowest speed. Press again to cycle through 10 speeds and patterns.
- 5. Press the power button for 3 seconds to turn toy off. The light will turn off and both motors will cease.