

Product Specifications:

Material: Silicone & ABS Battery: 200mAh Li-battery

Voltage: 3.7V

Number of Vibrations: 10 User time: 45-90 Minutes Sound Level: <20db



CHARGING INSTRUCTIONS

It is recommended to charge this toy before first use. Connect the USB cable to a power source at one end and the DC end into the port at the base of the toy. An indicator light flashes while the toy is charging and becomes solid when charge is complete. Initial and subsequent charges will complete in about 90 minutes.

Battery charge lasts for about 90 minutes on the lowest frequency, and about 45 minutes on the highest frequency. This toy operates at a sound level of less than 20db with a 200mAh lithium battery at 3.7V.

INSTRUCTIONS FOR USE

- 1. The 1-button control panel is located at the toy's base.
- 2. Hold the button for 3 seconds to turn the toy on. The light will turn on and the motor will begin in standby mode.
- 3. Press the button again more quickly to cycle through 3 speeds and 7 patterns.
 4. Hold the button for 3 seconds to turn the toy off. The light will turn off and the motor will stop.

USB RECHARGEABLE