

**Product Specifications:** 

Material: Silicone, ABS, & TPE Battery: 1800mAh Voltage: 3.6V Number of Vibrations: 7 thrusting, 7 vibrating User time: 45 - 70 Minutes Sound Level: ≤60db

## CHARGING INSTRUCTIONS

CHARGING INSTRUCTIONS
It is recommended to charge before first use. To charge, connect the USB plug into a power source and the DC charger into the port at the back of the toy's control panel. The indicator light will flash while device is charging and stay constant when toy is fully charged.

Charges will take about 3 hours to complete. Charge lasts for 45 minutes of play time at the highest speed and 70 minutes at the lowest speed.

This toy operates at a sound level of less than

This toy operates at a sound level of less than 60db with a rechargeable 1800mAh lithium battery at a voltage of 3.6V.

## INSTRUCTIONS FOR USE

1. Press the power button at the bottom of the

control panel for 3 seconds to turn toy on. The button will light up and toy will begin in standby mode.

2. Once toy is powered on and in standby, press the middle vibration button to activate vibration in the sleeve. Click again to cycle through 7 vibration speeds and patterns, then back to standby.

3. Press the top thrusting 3. Press the top thrusting button to activate thrusting in the sleeve. Click again to cycle through 7 thrusting speeds and patterns, then back to standby.

4. To turn toy off, press bottom power button for 3 seconds.

**USB RECHARGEABLE** 

INSERT CHARGER HERE