

Product Specifications:

Material: Silicone & ABS Battery: Polymer lithium Voltage: 3.7V

Number of Vibrations: 10 User time: 50 – 70 Minutes Sound Level: < 55dp

CHARGING INSTRUCTIONS

It is recommended to charge this toy fully before first use. Initial charge completes in about 30 minutes, subsequent charges in about an hour. Connect the USB cable to a power source at one end and connect the other end with the magnetic charging pins at the base of the toy. An indicator light flashes while charging, then becomes solid when charge is complete.



Battery charge lasts for about 70 minutes on the lowest frequency, and about 50 minutes on the highest frequency. Sound level reaches 55db and toy operates at 3.7V.

INSTRUCTIONS FOR USE

- 1. Press the button at the base of the toy for 2 seconds to turn toy on. The button will light up and toy will begin vibrating at its lowest frequency.
- 2. Press button again for 0.5 seconds at a time to cycle through 10 speeds and patterns.
- 3. To turn toy off, press button for at least 2 seconds. Vibration will cease and light will turn off.