

Product Specifications:

Material: Silicone, ABS & TPE Battery: Li-ion battery 902040, 700mAh Voltage: 3.7V Number of Vibrations: 10 modes of tapping / vibration 10 modes of tapping / vibration 10 modes of tongue flicking User time: 50 - 60 Minutes Sound Level: ≤60dB

CHARGING INSTRUCTIONS

It is recommended to charge before first use. Initial charge will take 90 minutes, subsequent charges 150 minutes. To charge, connect the USB plug into a power source and the DC charger onto the charging pins at the back of the toy. The indicator light will flash while device is charging and stay constant when toy is fully charged.

Charge lasts for 50 minutes of play time at the highest speed and 60 minutes at the lowest speed. This toy operates at a sound level of less than 60db with a rechargeable 700mAh lithium battery at a voltage of 3.7V.

INSTRUCTIONS FOR USE

1. The control panel is located above the charging pins at the back of the

ATTACH USB CHARGER

TO PRONGS

USB RECHARGEABLE

toy. Press the power button for 2 seconds to turn the toy on. The button will light up and toy will begin in standby mode.

2. Press the power button again quickly

2. Press the power button again quickly to engage the vibration/tapping motor in the sleeve. Vibration will begin at the lowest speed. Click again to cycle through 10 vibration speeds and patterns.

3. Once the toy is powered on and in standby, press the tongue-licking button to engage the tongue motion. Click again to cycle through 10 speeds and patterns.

4. To turn the toy off, press the power button for 2 seconds. Lights will turn off and all vibration will cease.