

Product Specifications:

Material: Silicone & ABS Battery: 601230 190MaH

Voltage: 3.7V

Number of Vibrations: 12 User time: 45 - 60 Minutes Sound Level: <55dB

CHARGING INSTRUCTIONS

CHARGING INSTRUCTIONS
It is recommended to charge this toy fully before first use. To charge, connect the USB plug into a power source at one end and the DC charger into the charging port at the back of the ringed handle. The LED light will flash while the device is charging and remain solid when fully charged. Initial charge completes in about an hour, subsequent charges complete in 90 minutes. Charge lasts for one hour of play time at the lowest vibration level, and about 45 minutes at the highest level. This toy operates at a sound level of 55db with a 190mAh lithium battery at 3.7V.



INSTRUCTIONS FOR USE

1. The control panel is located at the front of the toy's ringed handlé.

2. Press the power 2. Press the power button for 2 seconds to turn toy on. The button will light up and the motor will begin in standby.
3. Press the vibration button to engage vibration and cycle through 12 speeds and notterns.

patterns.
4. To turn the toy off, press the power button for 2 seconds. The light will turn off and the motor will cease.