## **PLAYBOY**

## PRODUCT SPECIFICATIONS:

MATERIAL: ABS, TPE & SILICONE

**FUNCTIONS: 6 SPEEDS & RHYTHMS** 

BATTERY: 1000MAH VOLTAGE: 5V

USER TIME: 90 MINUTES



CHARGING INSTRUCTIONS: It is recommended to charge CHARGING INSTRUCTIONS: It is recommended to charput the top before first use. To charge, connect the USB plug into a power source and the charger end into the port located at the side of the toy's base. Charges will take about 90 minutes to complete. The indicator light will flash while device is charging and stay constant when toy is fully charged.

Charge lasts for about 90 minutes of play time with average use. This toy operates at a sound level of 70db with a rechargeable 1000mAh lithium battery at 5V.

SOUND LEVEL: ≤70DB

use. This toy operates at a sound level of 70db with a rechargeable 1000mAh lithium battery at 5V.

INSTRUCTIONS FOR USE

1. This stroker has a removeable cap that is also the UV cleaning base.
2. The 2-button motor control panel is located at the top of the canister.
3. Press the circle power button for 1.5 seconds to turn toy on. The button will light up and the stroker will begin in standby mode. Press the button again to cycle through 6 speeds and rhythms of vibration. Press the button again for 1.5 seconds to turn the vibration motor off.
4. When the toy is on press the thermometer button to activate the heating function. The sleeve will automatically heat to 107.6 degrees Fahrenheit (42 Celsius) in about 10 minutes. The heat will last for about 20 minutes with batter power. Press button again for 1.5 seconds to stop the heating function.

S. Recommended: DC power can also be used for the heating function. Insert the charging cable into its port and connect to a power source. Then hold the thermometer button down for 3 seconds to activate the plug-in heating mode. Maximum temperature will be reached in about 10 minutes, after which it can be unplugged for use during a 30-minute insulation state.

NOTE: Plug-in mode is suitable for pre-heating toy and for post-use drying. It can greatly reduce battery consumption. 6. To use the UV sanitizer and fan dryer, plug in the USB cable into the USB port in the back of the base. Light will turn on and you will begin to hear the fan turn on to dry the strokers channel. The ideal disinfecting time is 5 to 10 minutes. The UV light and fan will run for an hour until shutting off on their own. To continue running for a longer period re-plug the cable into the USB cable will be a south of the port.

VIBRATOR CARE INSTRUCTIONS

th Plabov Pleasure ~ Slick: H20 llubricant as well as other water-based

- cable into the port.

  VIBRATOR CARE INSTRUCTIONS

  1. Compatible with Playboy Pleasure Slick: H2O lubricant as well as other water-based lubricants. Make sure lubricants do not enter the battery compartment, as they may react with the batteries.

  2. Continuous constant use of the vibrator's motor may create excessive heat. If your vibrator feels too hot, switch it off and allow it to cool before continuing use.

  3. Clean your vibrator after every use with Playboy Pleasure Clean: Foaming 1 ory Cleaner and a warm water rinse. Dry thoroughly before storage.

  4. Store your vibrator in a cool dry place separated from other toys, as toy materials sometimes react chemically with each other.

