

Product Specifications:

Material: TPR & ABS Battery: 103035/7.4V/1100mAh Li-Battery Vo**l**tage: 7.4V Number of Functions: 7 User time: 90 minutes Sound Level: 55db

CHARGING INSTRUCTIONS

It is recommended to charge before first use. Initial charge will take about 40 minutes, subsequent charges 120 minutes. To charge, connect the USB plug into a power source and the DC charger onto the magnetic charging pins at the side of the toy. The indicator light will flash while device is charging and stay constant when toy is fully charged.

Charge lasts for 90 minutes of play time with average use. This toy operates at a sound level of less than 55db with a rechargeable 1100mAh

lithium battery at a voltage of 3.7V.

INSTRUCTIONS FOR USE

- 1. The control button is located above the charging pins at the side of the toy. Press the power button for 3 seconds to turn the toy on. The button will light up and the toy will begin in standby.
- 2. Press the button again more quickly to cycle through 7 thrusting speeds and patterns (3 speeds, 4 patterns).

 3. To turn the toy off, press the button for 3 seconds. Lights will turn off
- and thrusting will cease.

